



**SPARE PARTS  
PACIFIC 48-60**  
*Driving gear*

PA004-002 Rev.00


2015 Rev. 00

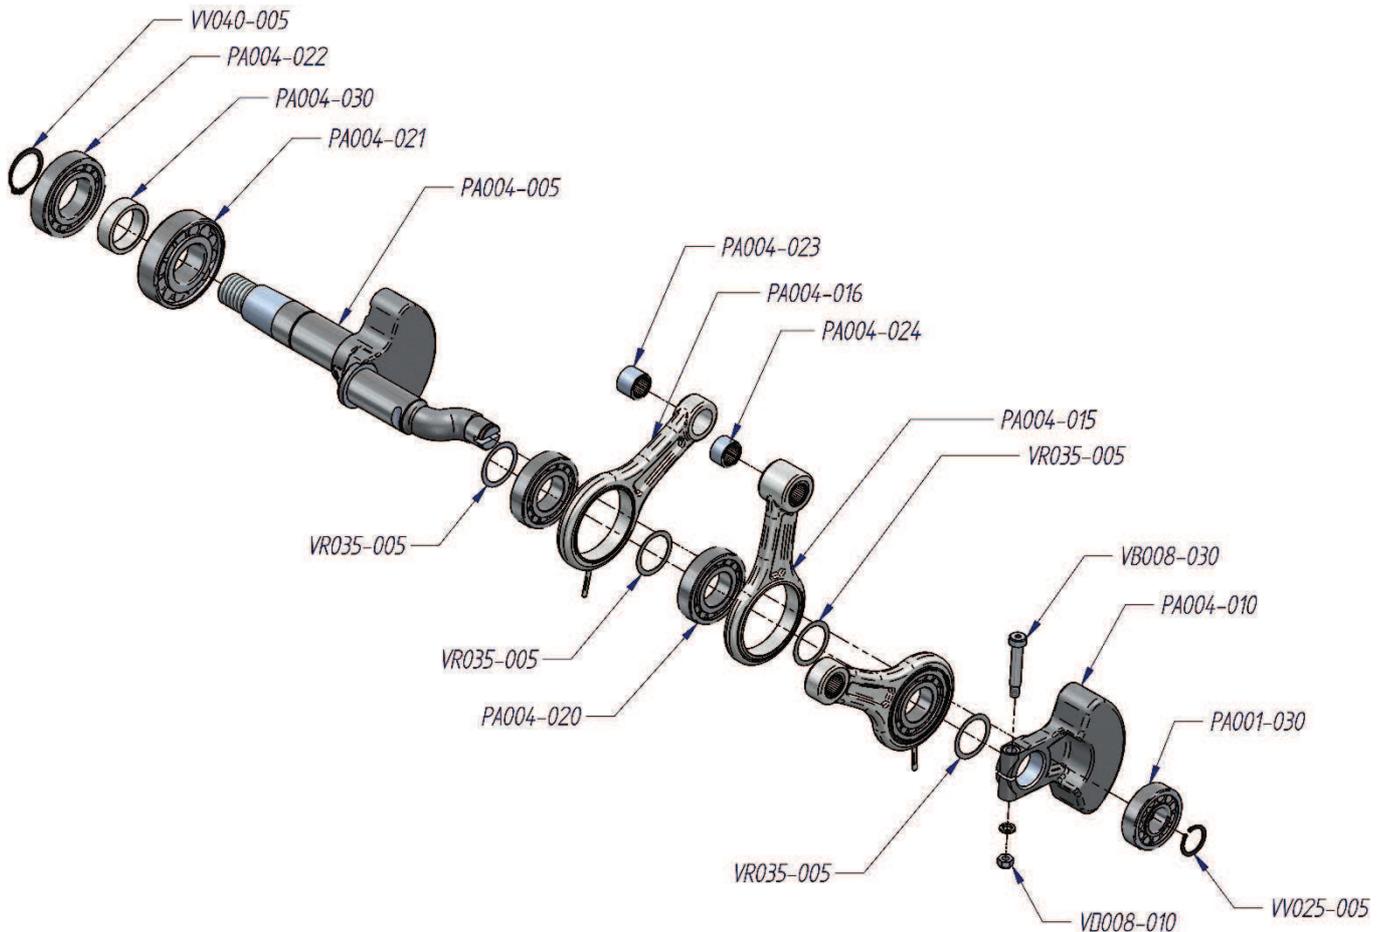


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
PA001-030	Roller bearing	PA004-021	Roller bearing	VD008-010	Nut
PA004-005	Shaft	PA004-022	Roller bearing	VR035-005	Washer
PA004-010	Counterbalance	PA004-023	Roller bearing	VV025-005	Safety ring
PA004-015	Connecting rod	PA004-024	Roller bearing	VV040-005	Safety ring
PA004-016	Connecting rod with oil thrower pin	PA004-030	Flange		
PA004-020	Roller bearing	VB008-030	Screw		

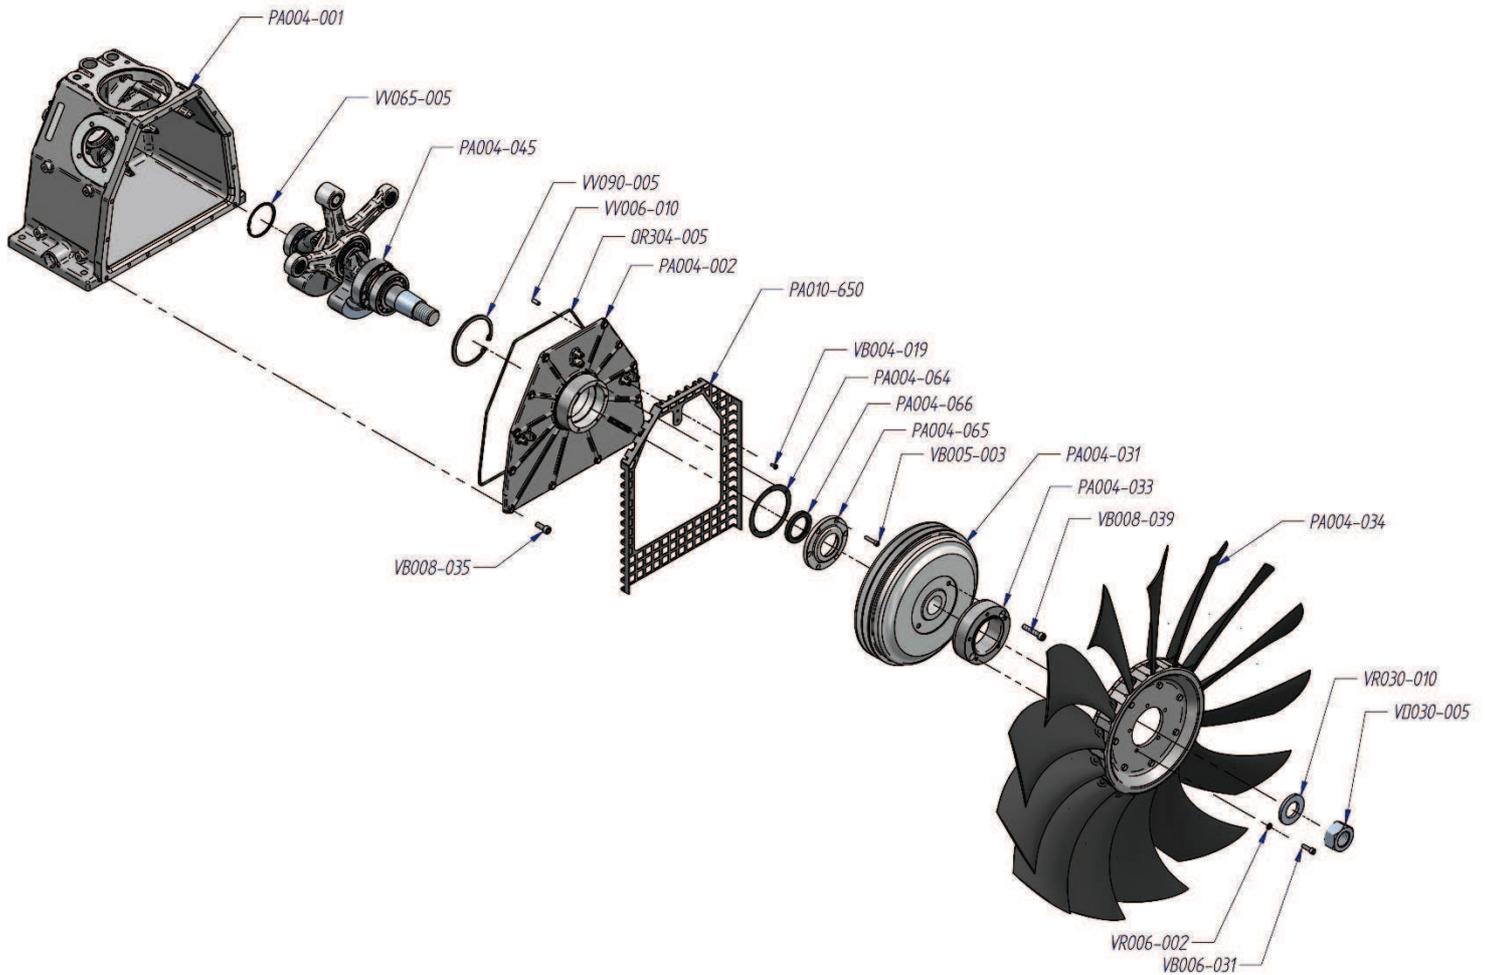

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
OR304-005	O-ring	PA004-033	Flange	VD030-005	Nut
PA004-045	Shaft complete of connecting rod	PA004-034	Fan	VR006-002	Washer
PA004-001	Compressor crankcase	Pa010-650	Cover pulley	VR030-010	Washer
PA004-002	Closing crankcase flange	VB004-019	Screw	VV006-010	Pin
PA004-064	Gasket	VB005-003	Screw	VV065-005	Safety ring
PA004-065	Oil seal flange	VB006-031	Screw	VV090-005	Safety ring
PA004-066	Oil seal	VB008-035	Screw		
PA004-031	Pulley	VB008-039	Screw		

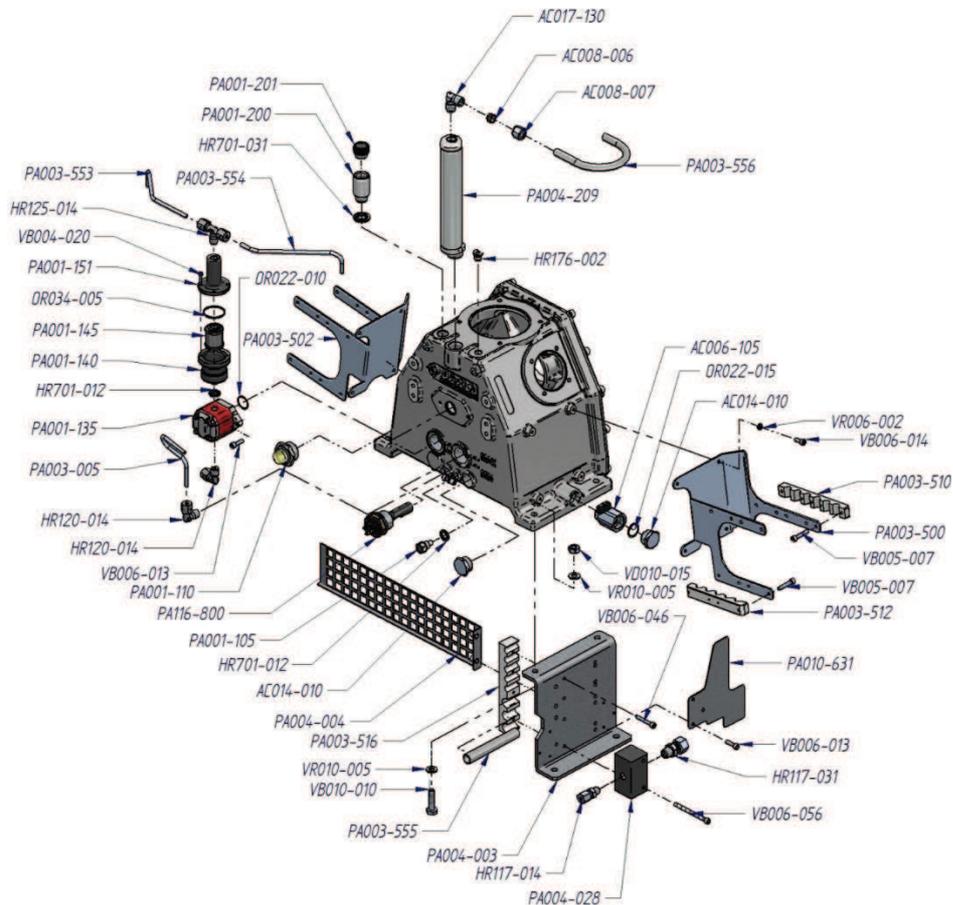


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
AC006-105	Ball valve	PA001-140	Oil filter holder chamber	PA004-209	Oil separator
AC008-006	Ogive for tube 12mm	PA001-145	Oil filter	PA010-631	Cover fan
AC008-007	Nut for tube 12 mm	PA001-151	Closure oil filter chamber	PA116-800	Oil alert
AC014-010	Closure plug	PA001-200	Oil fitting pipe	VB004-020	Screw
AC017-130	Pipe fitting "L"	PA001-201	Plug	VB005-007	Screw
HR117-014	Pipe fitting	PA003-005	Tube oil pump	VB006-013	Screw
HR117-031	Pipe fitting	PA003-500	Support cooling tube	VB006-014	Screw
HR120-014	Pipe fitting "L"	PA003-502	Support cooling tube	VB006-046	Screw
HR125-014	Pipe fitting "T"	PA003-510	Support cooling tube	VB006-056	Screw
HR176-002	Closure plug	PA003-512	Support cooling tube	VB010-010	Screw
HR701-012	Washer gasket	PA003-516	Support cooling tube	VD010-015	Nut
HR701-031	Washer gasket	PA003-553	Tube oil pump	VR006-002	Washer
OR022-010	O-ring	PA003-554	Tube oil pump	VR010-005	Washer
OR022-015	O-ring	PA003-555	Tube		
OR034-005	O-ring	PA003-556	Tube		
PA001-105	Magnetic plug	PA004-003	Support compressor		
PA001-110	Visual oil level plug	PA004-004	Cover Fan		
PA001-135	Oil pump	PA004-028	Connection		

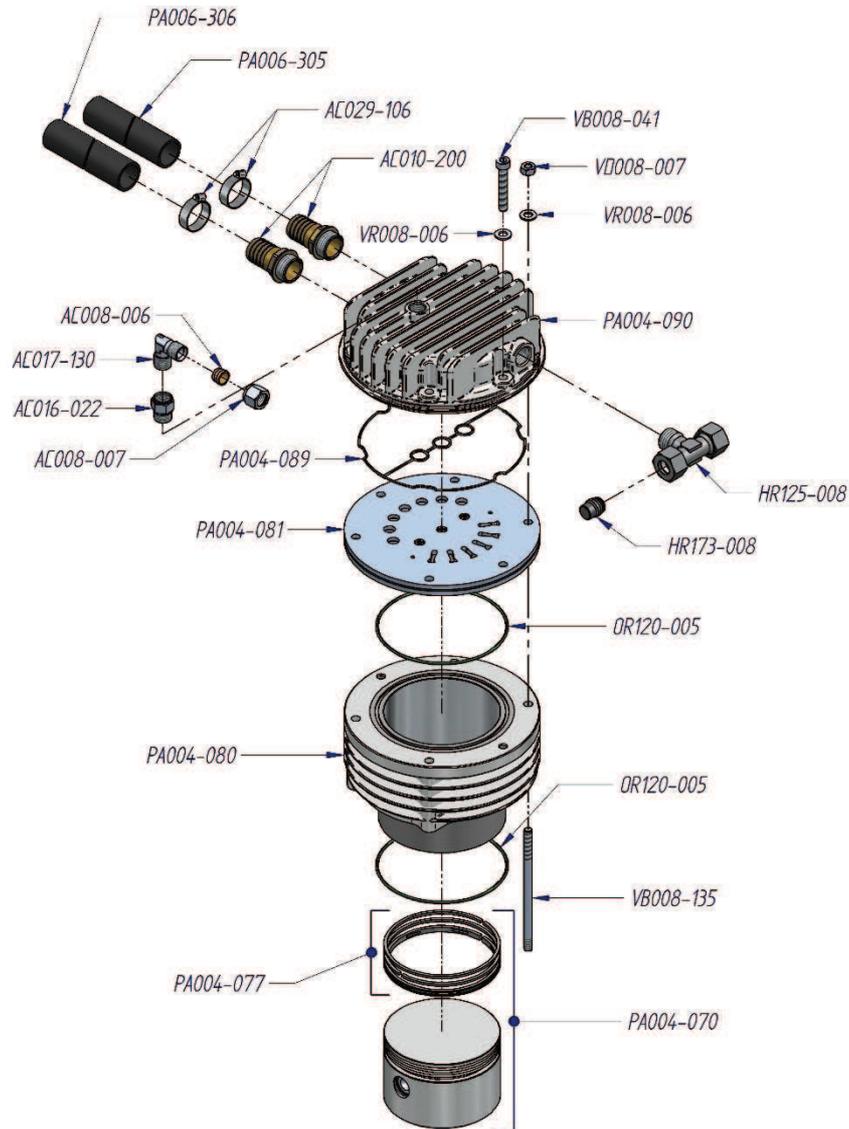


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
AC008-006	O-ring	OR120-005	O-ring	PA006-606	Tube
AC008-007	Nut	PA004-070	Complete piston	VB008-135	Screw
AC010-200	Connection	PA004-077	Set Piston rings	VB008-041	Screw
AC016-007	Connection	PA004-080	Cylinder 1 <sup>st</sup> stage	VD008-007	Nut
AC017-130	Pipe fitting "L"	PA004-081	Plate valve 1 <sup>st</sup> stage	VR008-006	Washer
AC029-106	Clamp	PA004-089	O-ring		
HR125-008	Pipe fitting "T"	PA004-090	Head 1 <sup>st</sup> stage		
HR173-008	Closure connection	PA006-605	Tube		

## SPARE PARTS PACIFIC 48-60 2<sup>nd</sup> STAGE


PA004-045 Rev.00  
Date 16/02/2016

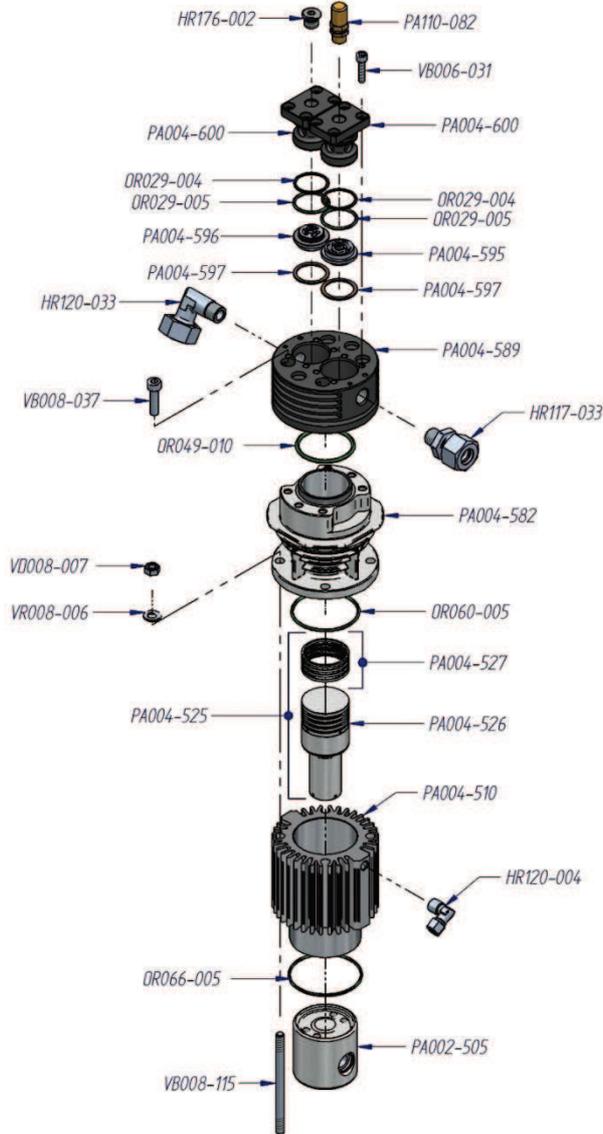

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
HR117-033	Pipe fitting	PA004-510	Cylinder	PA004-600	Cover valve
HR120-004	Pipe fitting "L"	PA004-525	Complete piston with rings	PA110-082	Safety valve
HR120-033	Pipe fitting "L"	PA004-526	Piston	VB006-031	Screw
OR029-004	O-ring	PA004-527	Set piston rings	VB008-037	Screw
OR029-005	O-ring	PA004-582	Cylinder	VB008-115	Screw
OR049-010	O-ring	PA004-589	Valve head	VD008-007	Nut
OR060-005	O-ring	PA004-595	Valve	VR008-006	Washer
OR066-005	O-ring	PA004-596	Valve		
PA002-505	Piston guide	PA004-597	Seal		

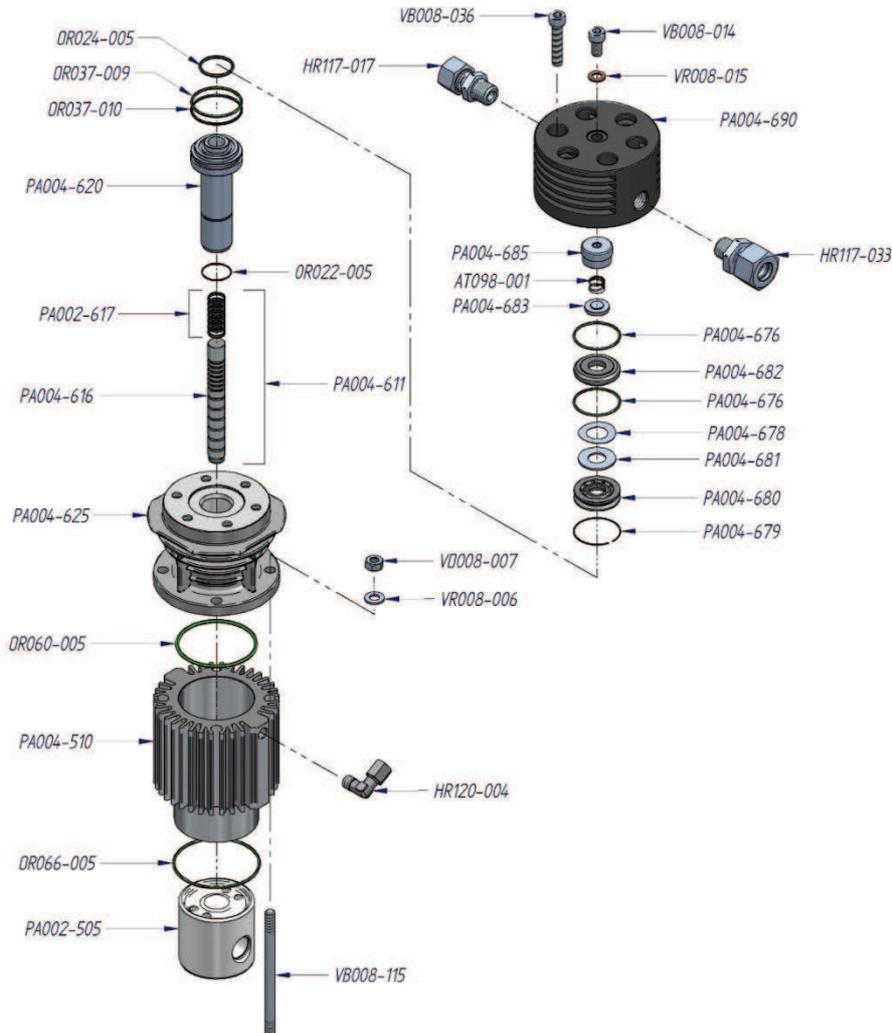

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
AT098-001	Spring	PA004-510	Cylinder	PA004-685	Suction valve
HR117-017	Pipe fitting direct	PA004-611	Complete piston with rings	PA004-690	Valve head
HR117-033	Pipe fitting direct	PA004-616	Piston	VB008-014	Screw
HR120-004	Pipe fitting "L"	PA004-620	Cylinder's pipe	VB008-036	Screw
OR037-009	O-ring	PA004-625	Cylinder	VB008-115	Screw
OR037-010	O-ring	PA004-680	Coupling pressure valve	VD008-007	Nut
OR022-005	O-ring	PA004-681	Pressure valve	VR008-006	Washer
OR024-005	O-ring	PA004-682	Top valve	VR008-015	Washer
OR060-005	O-ring	PA004-676	Special O-Ring		
OR066-005	O-ring	PA004-678	Special spring		
PA002-505	Piston guide	PA004-679	Setger valve		
PA002-617	Set piston rings	PA004-683	Valve top		

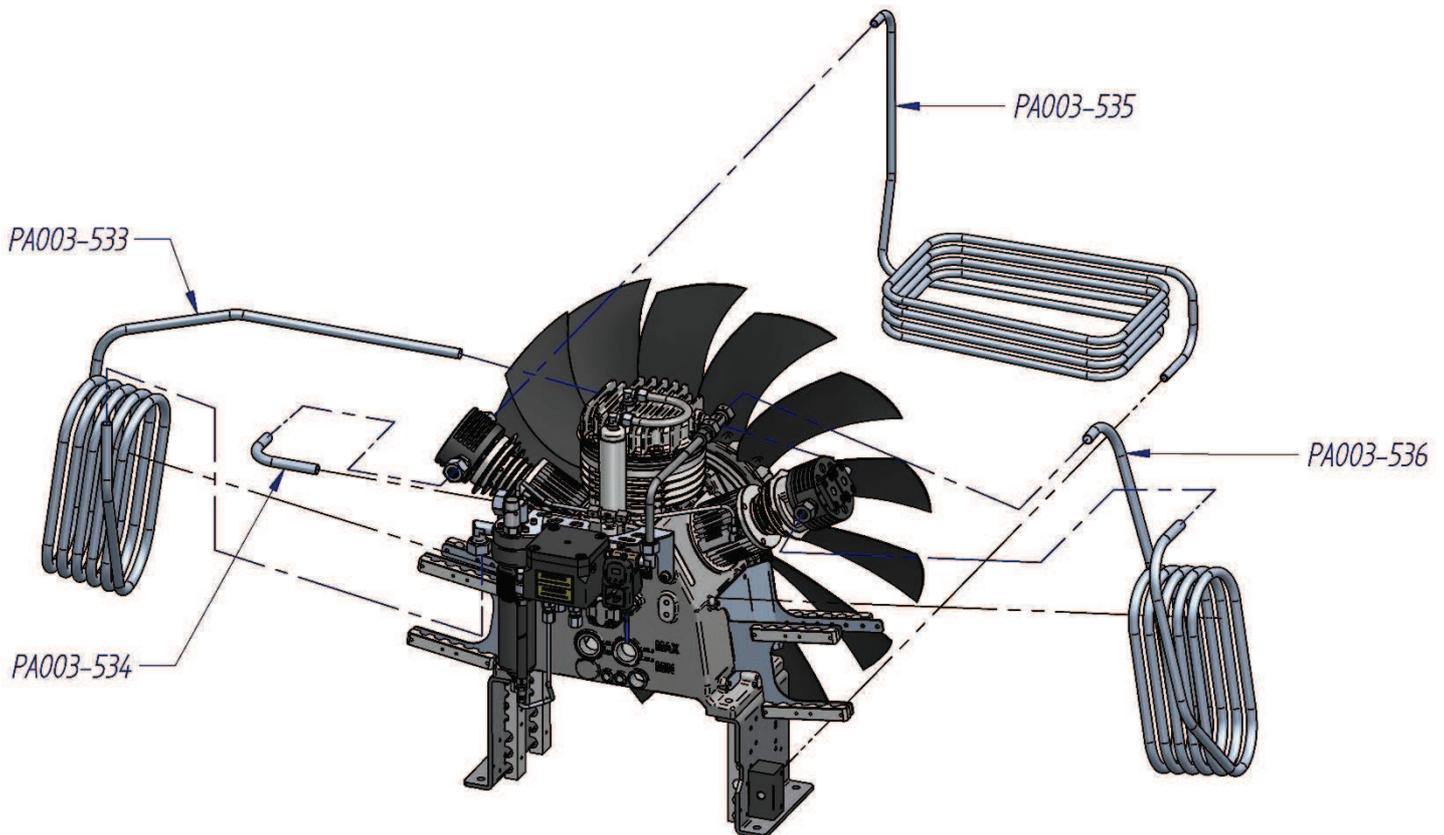


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
PA003-533	Inter cooler	PA003-535	Inter cooler		
PA003-534	Tube	PA003-536	Inter cooler		



**SPARE PARTS  
PACIFIC 48-60  
Separator 2<sup>nd</sup> STAGE**

PA004-205 Rev.00

2016 Rev. 00

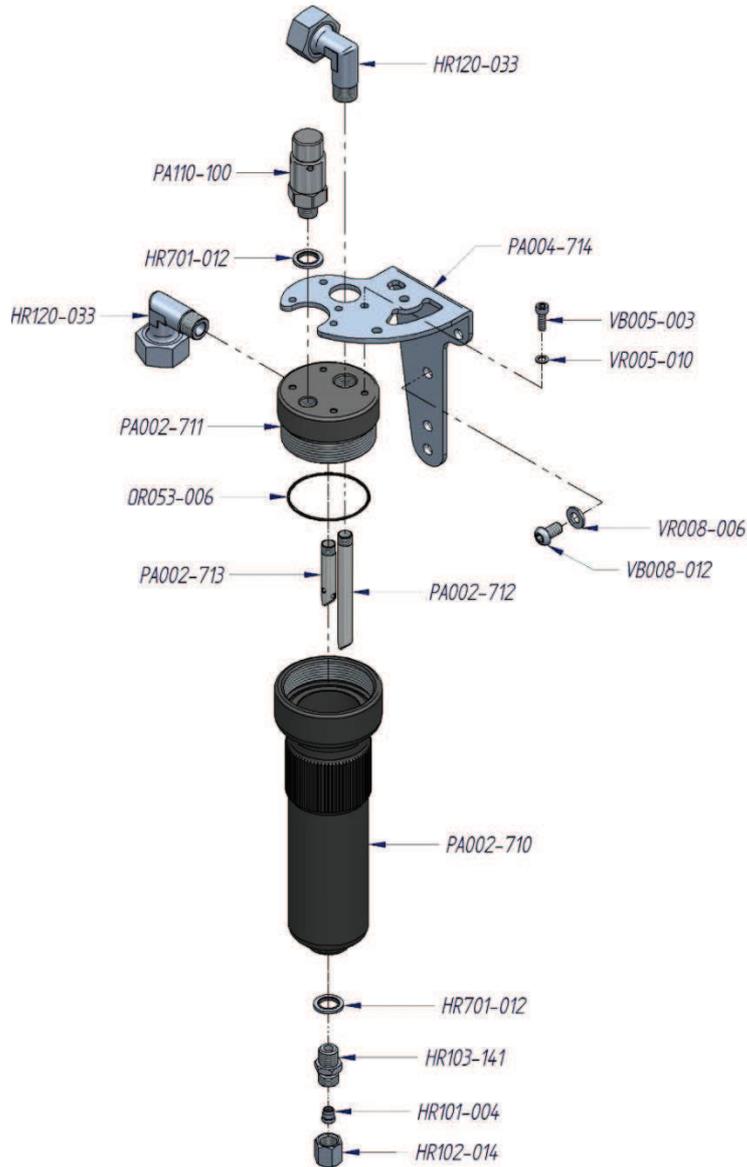


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
HR101-004	Ogive	PA002-710	Body filter separator	VB005-003	Screw
HR102-014	Nut fitting pipe	PA002-711	Head filter separator	VB008-012	Screw
HR103-141	Body pipe fitting	PA002-712	Tube separator	VR004-010	Washer
HR120-033	Pipe fitting "L"	PA002-713	Tube separator	VR008-006	Washer
HR701-012	Washer gasket	PA004-714	Support filter separator		
OR053-006	O-ring	PA110-100	Safety valve		



**SPARE PARTS  
PACIFIC MX 48  
Motor and pulley**

PA702-101 Rev.00

2016 Rev. 00

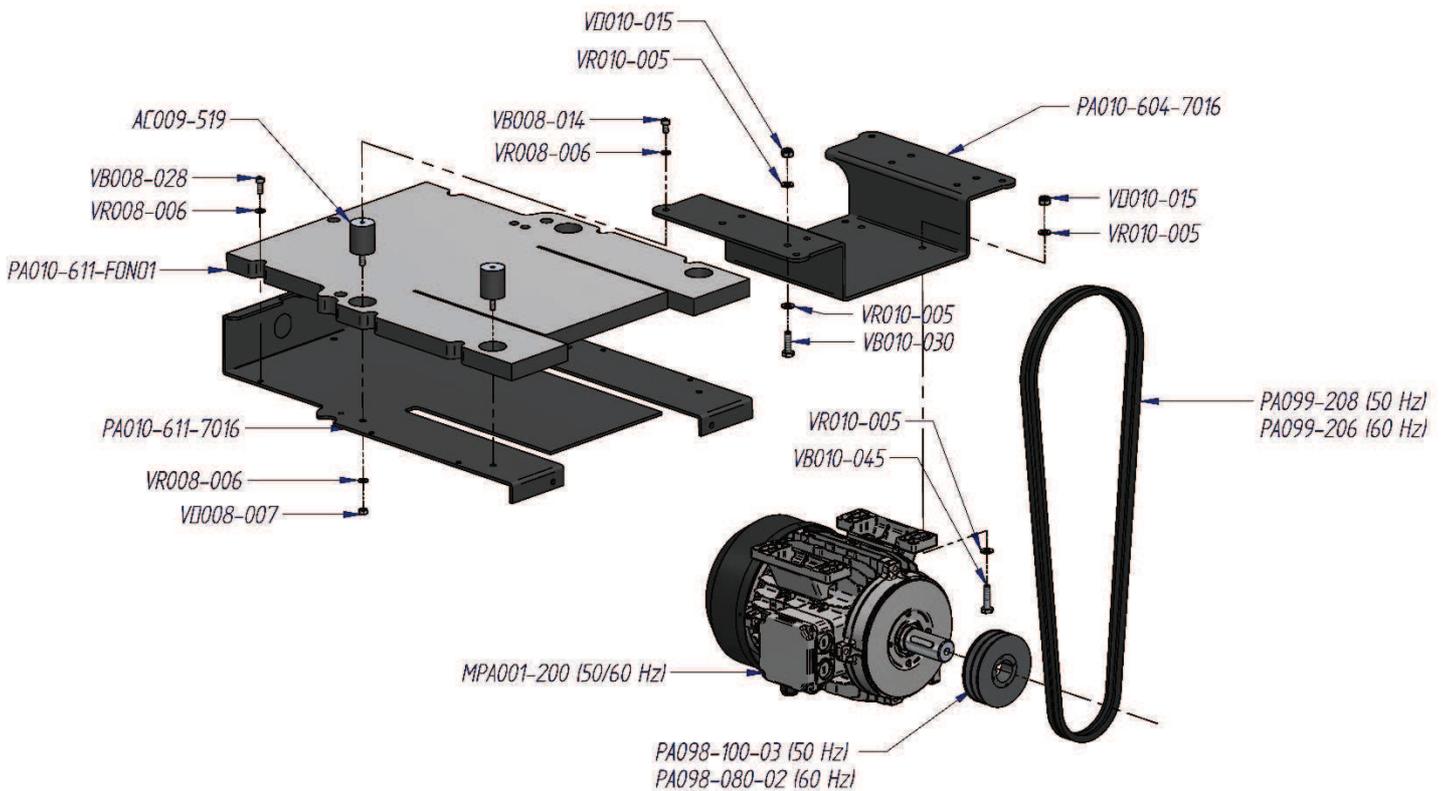


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
AC009-519	Antivibration	PA098-100-03	Pulley	VB010-045	Screw
MPA001-041	Electric motor 15,0 Hp	PA099-206	Belt	VD008-007	Nut
PA010-604-7016	Support	PA099-208	Belt	VD010-015	Nut
PA010-611-7016	Pannel	VB008-014	Screw	VR008-006	Washer
PA010-611-FONO1	Sound-absorbing	VB008-028	Screw	VR010-005	Washer
PA098-080-02	Pulley	VB010-030	Screw		

**SPARE PARTS  
PACIFIC MX 60  
Motor and pulley**


PA702-101 Rev.00

2016 Rev. 00

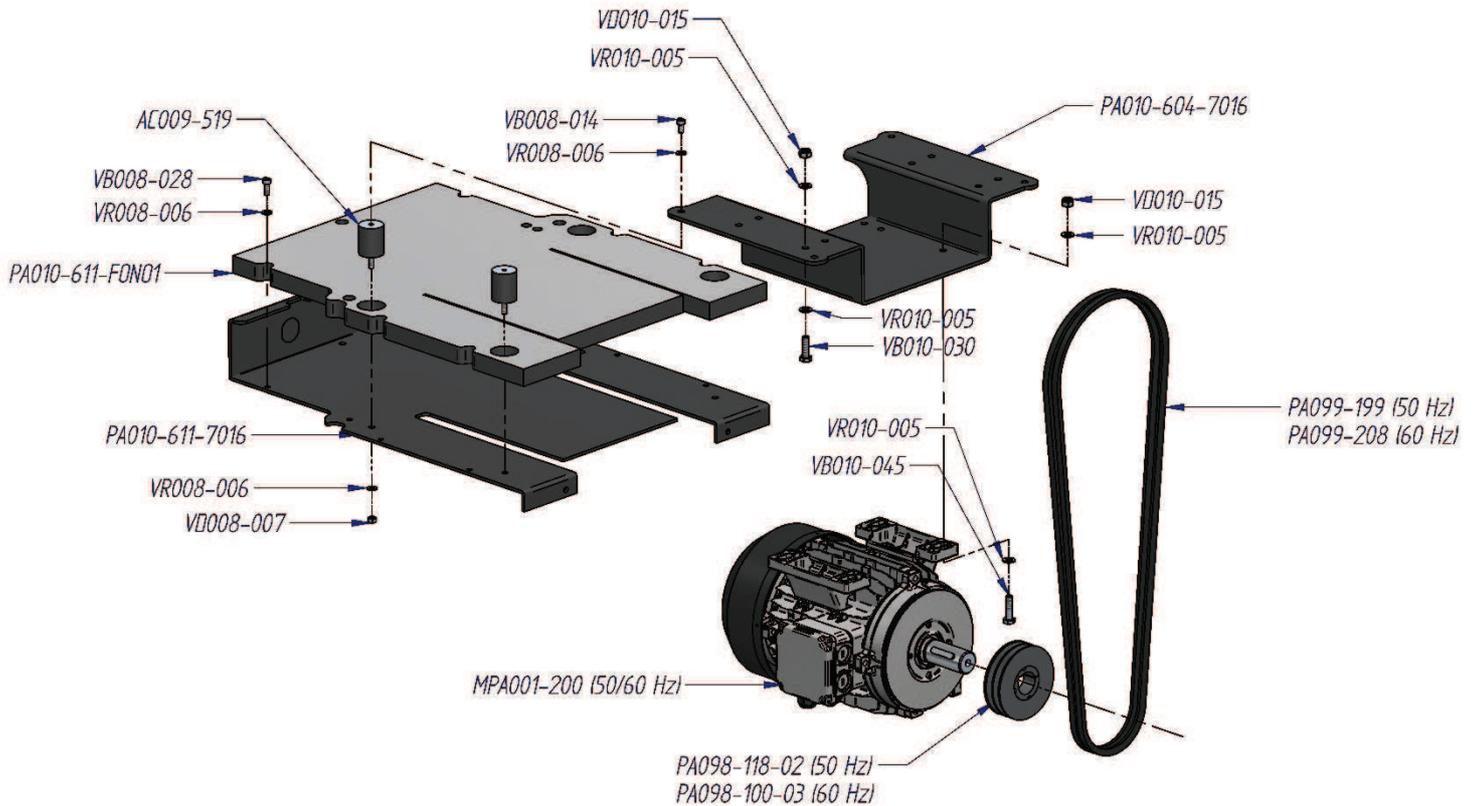


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
AC009-519	Antivibration	PA098-118-02	Pulley	VB010-045	Screw
MPA001-041	Electric motor 15,0 Hp	PA099-199	Belt	VD008-007	Nut
PA010-604-7016	Support	PA099-208	Belt	VD010-015	Nut
PA010-611-7016	Pannel	VB008-014	Screw	VR008-006	Washer
PA010-611-FONO1	Sound-absorbing	VB008-028	Screw	VR010-005	Washer
PA098-100-03	Pulley	VB010-030	Screw		



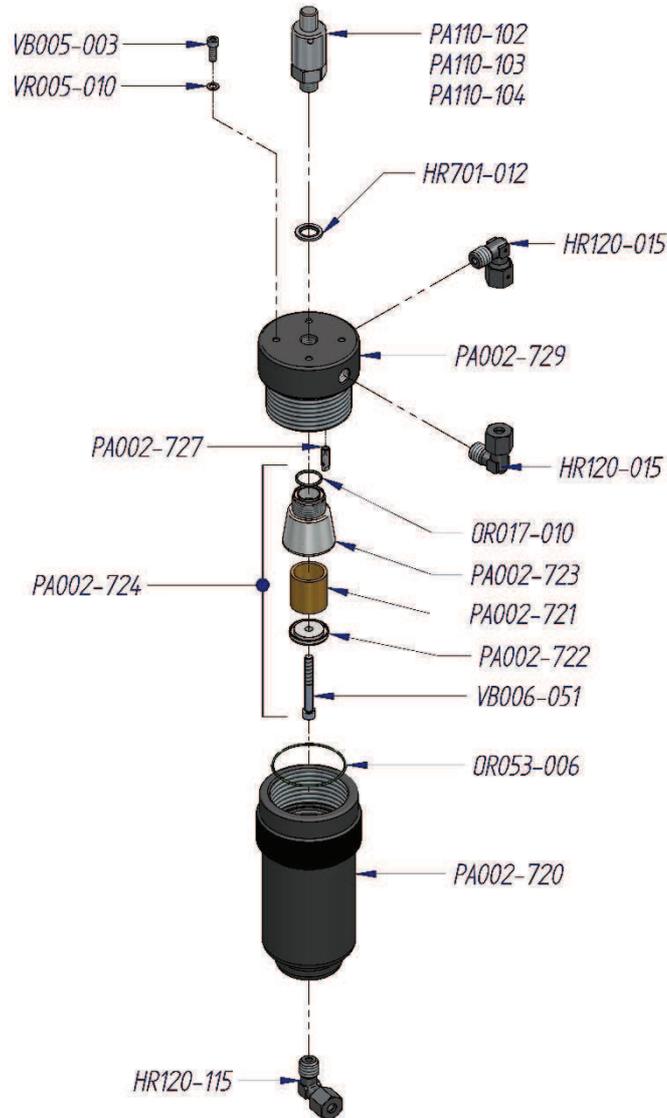


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
HR120-015	Pipe fitting "L"	PA002-721	Sintered filter	PA110-102	Safety valve PN 200 bar
HR120-115	Pipe fitting "L"	PA002-722	Flange	PA110-103	Safety valve PN 300 bar
HR701-012	Washer gasket	PA002-723	Flange	PA110-104	Safety valve PN 300 bar
OR017-010	O-ring	PA002-724	Complete filter separator cartridge	VB005-003	Screw
OR053-006	O-ring	PA002-729	Head filter separator	VB006-051	Screw
PA002-720	Body filter separator	PA002-727	Tube separator	VR005-010	Washer


	<b>SPARE PARTS</b> <b>PACIFIC MX</b> <i>Frame and filter PAC3</i>	PA702-115 Rev.00
		2016 Rev. 00

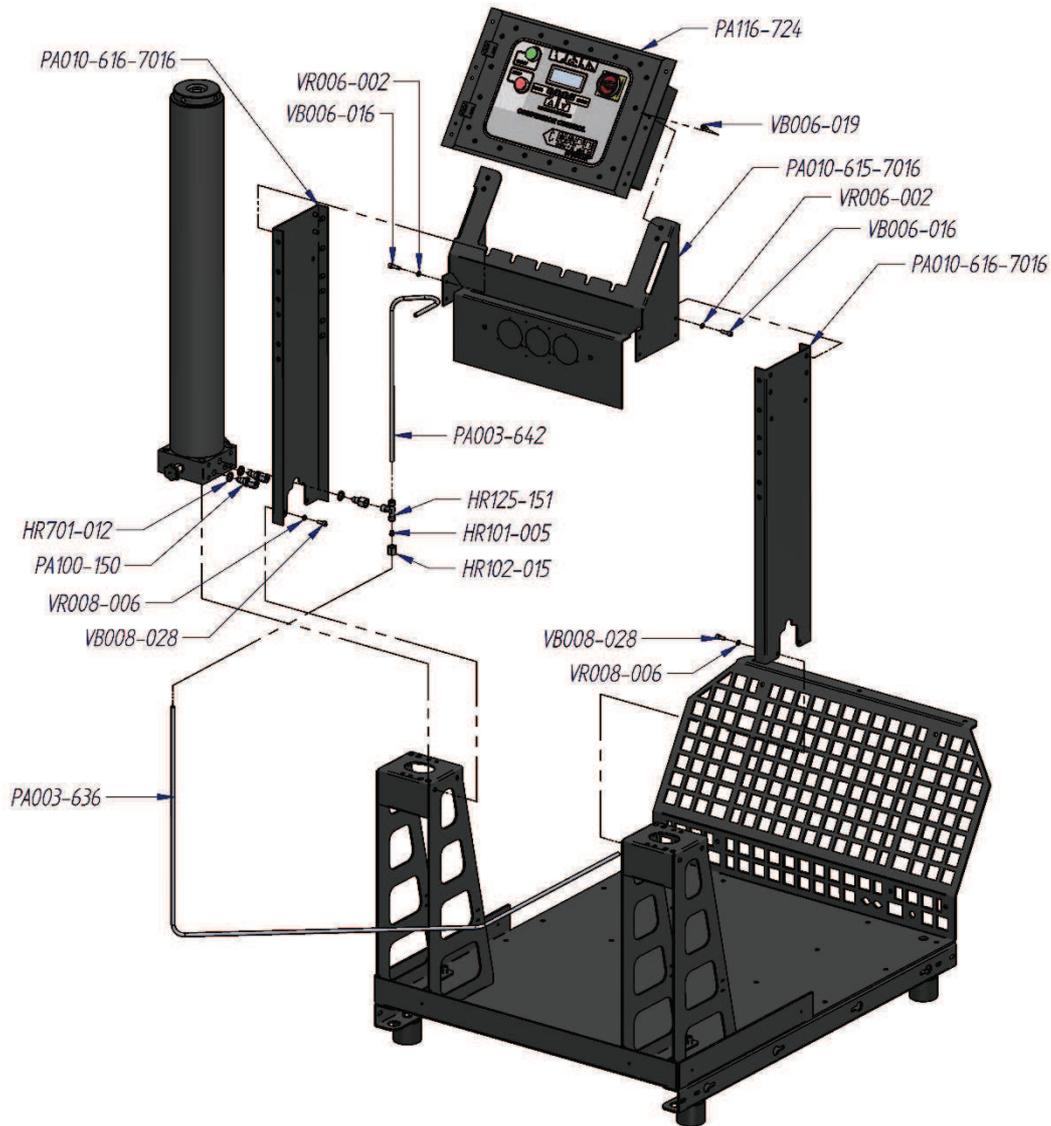


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
HR101-005	Ogive	PA010-616-7016	Support	VR006-002	Washer
HR102-015	Nut fitting pipe	PA100-150	Pipe fitting whit not return valve	VR008-006	Washer
HR125-151	Body pipe fitting "T"	PA116-724	Switchboard whit soft start		
HR701-012	Washer gasket	VB006-016	Screw		
PA003-630	Tube	VB006-019	Screw		
PA003-642	Tube 4 connection PAC3	VB008-028	Screw		
PA003-636	Tube	VB008-041	Screw		
PA010-615-7016	Support	VB008-051	Screw		

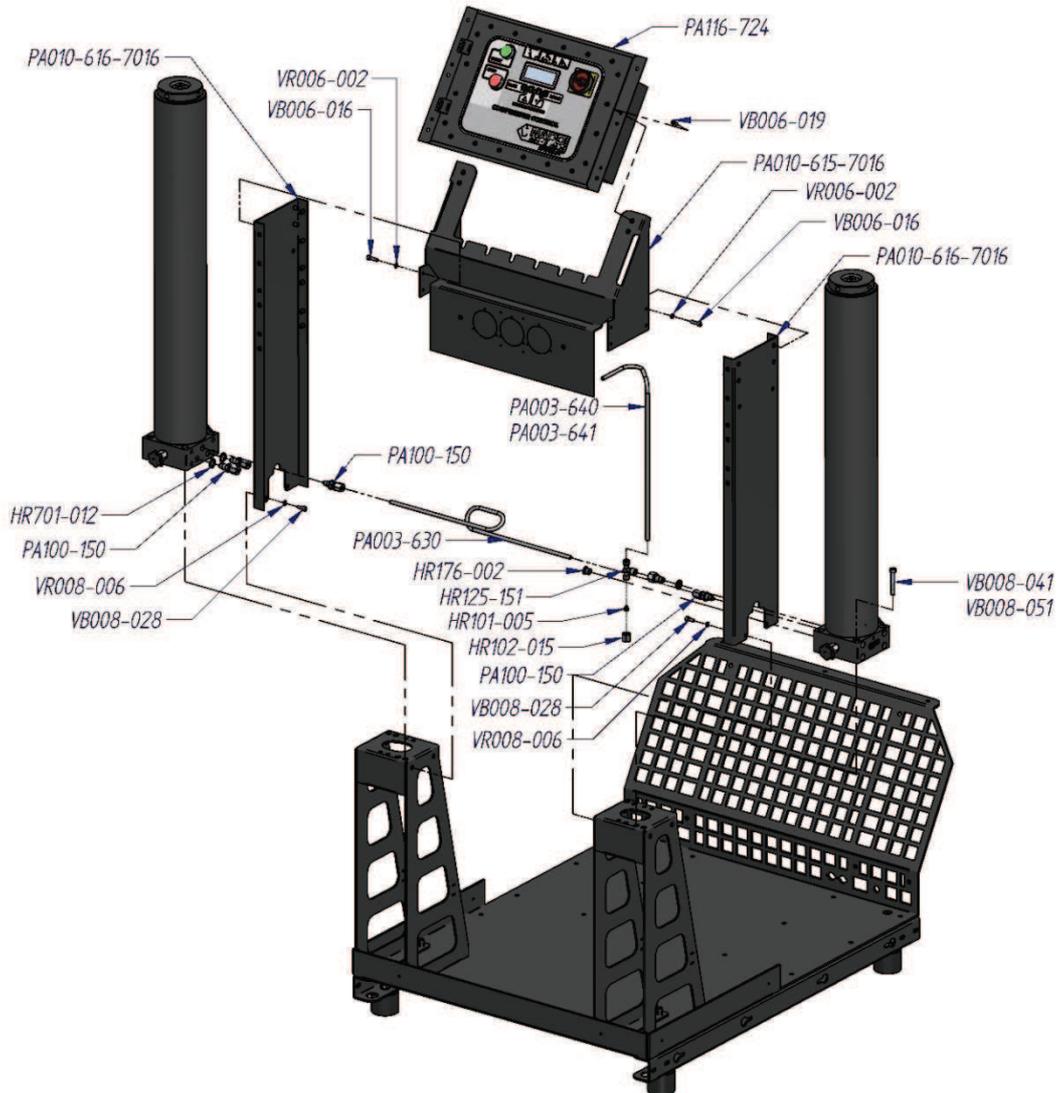


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
HR101-005	Ogive	PA010-615-7016	Support	VB008-051	Screw
HR102-015	Nut fitting pipe	PA010-616-7016	Support	VR006-002	Washer
HR125-151	Body pipe fitting "T"	PA100-150	Pipe fitting whit not return valve	VR008-006	Washer
HR176-002	Closure plug	PA116-724	Switchboard whit soft start		
HR701-012	Washer gasket	VB006-016	Screw		
PA003-630	Tube	VB006-019	Screw		
PA003-640	Tube 4 connection	VB008-028	Screw		
PA003-641	Tube 2 connection	VB008-041	Screw		

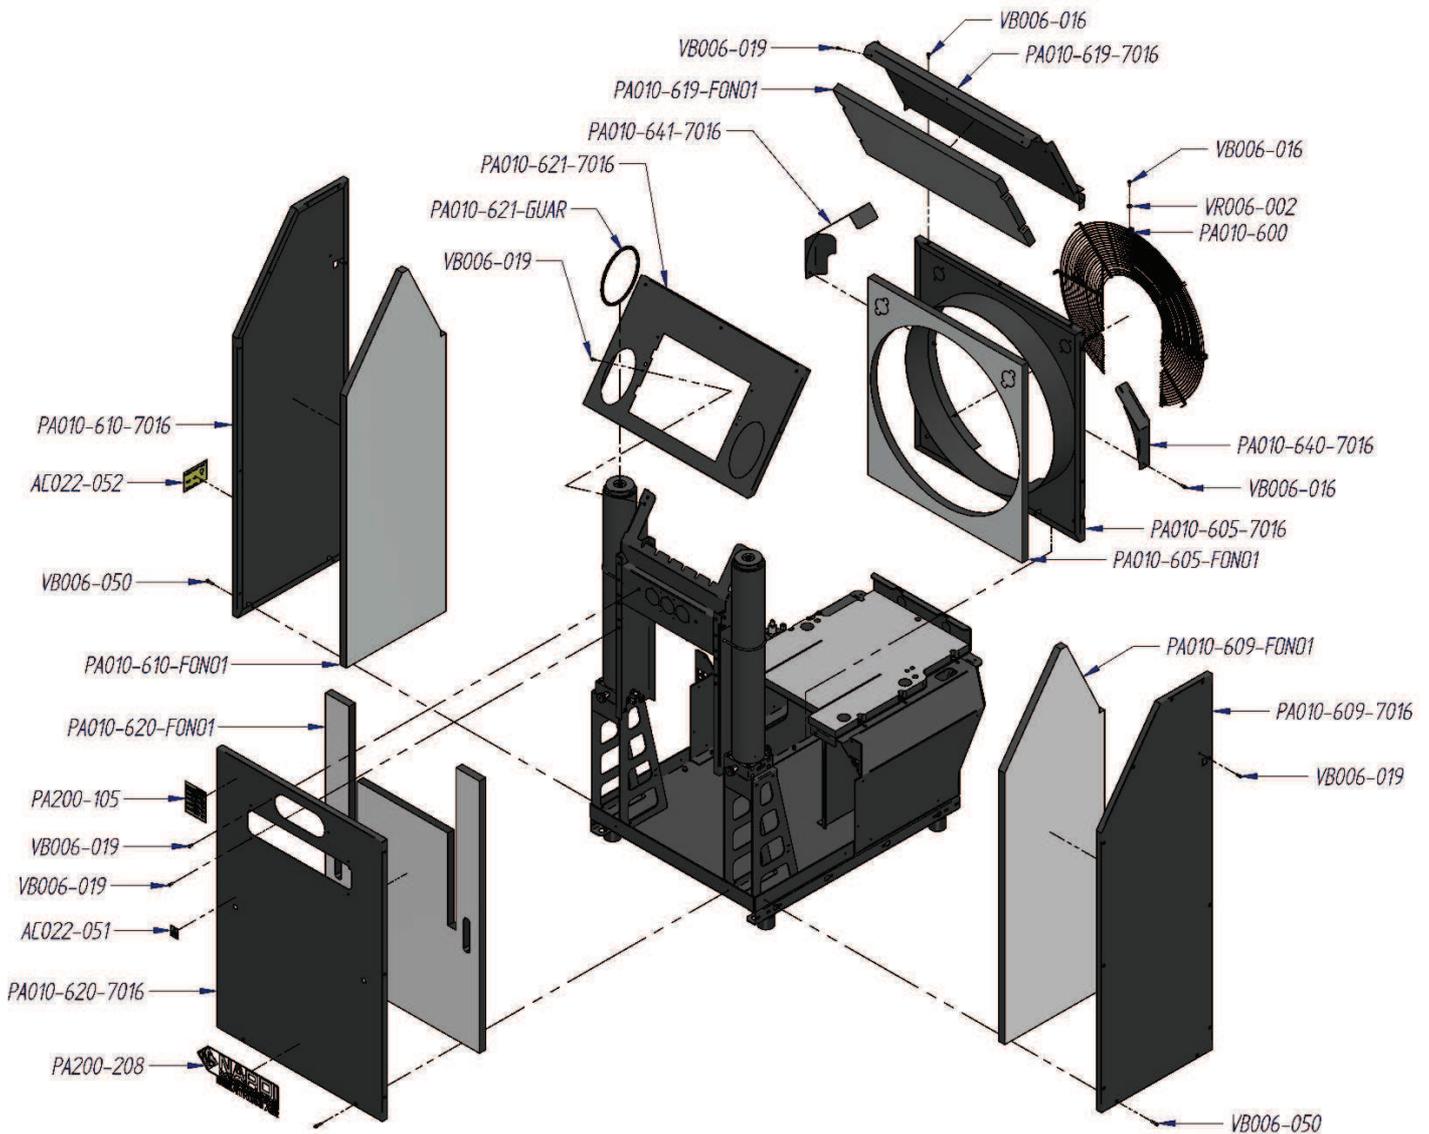


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
AC022-051	Stiker	PA010-610-FON01	Sound-absorbing	PA010-641-7016	Conveyor
AC022-052	Stiker	PA010-619-7016	Panel	PA200-105	Stiker
PA010-600	Metal protection	PA010-619-FON01	Sound-absorbing	PA200-208	Stiker
PA010-605-7016	Panel	PA010-620-7016	Panel	VB006-016	Screw
PA010-605-FON01	Sound-absorbing	PA010-620-FON01	Sound-absorbing	VB006-019	Screw
PA010-609-7016	Panel	PA010-621-7016	Panel	VR006-019	Washer
PA010-609-FON01	Sound-absorbing	PA010-621-GUAR	Rubber gasket		
PA010-610-7016	Panel	PA010-640-7016	Conveyor		

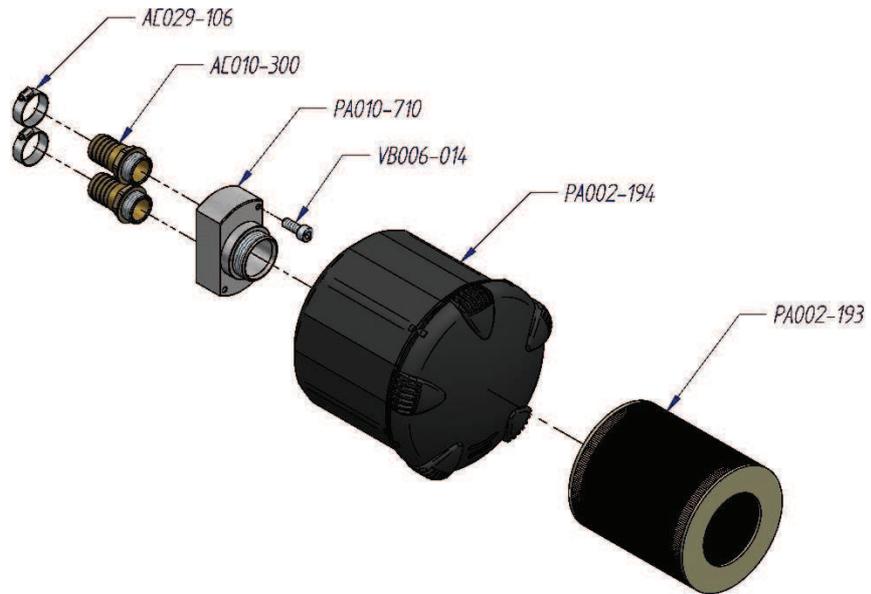

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
AC010-300	Connection	PA002-193	Intake filter cartridge		
AC029-106	Clamp	PA010-710	Flange		
PA002-194	Complete intake filter	VB006-014	Screw		

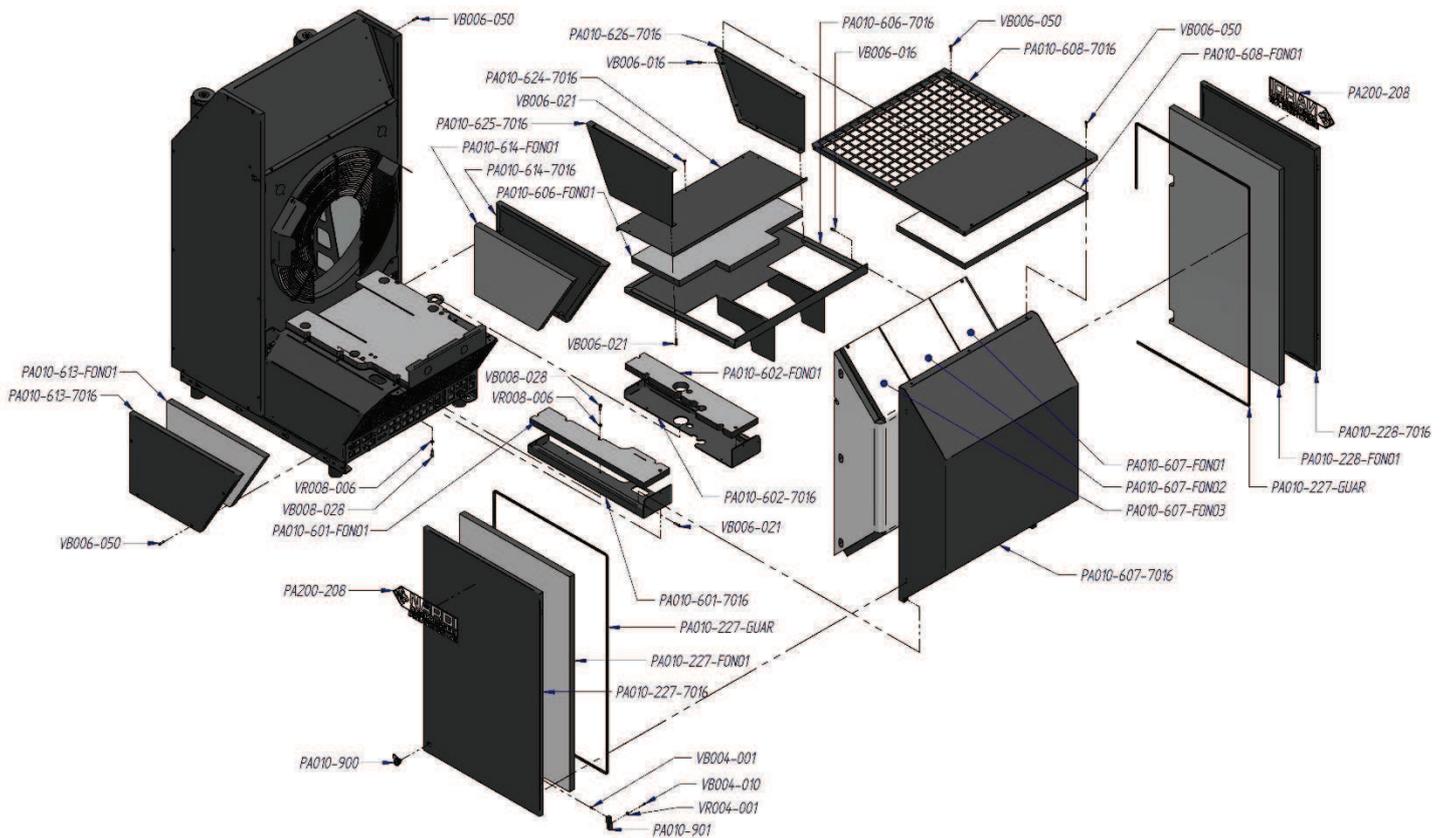

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
PA010-601-7016	Panel	PA010-613-7016	Panel	PA010-900	Hinge
PA010-601-FONO1	Sound-absorbing	PA010-613-FONO1	Sound-absorbing	PA010-901	Latch
PA010-602-7016	Panel	PA010-614-7016	Panel	PA200-208	Stiker
PA010-602-FONO1	Sound-absorbing	PA010-614-FONO1	Sound-absorbing	VB004-010	Screw
PA010-606-7016	Panel	PA010-624-7016	Panel	VB006-016	Screw
PA010-606-FONO1	Sound-absorbing	PA010-625-7016	Panel	VB006-021	Screw
PA010-607-7016	Panel	PA010-626-7016	Panel	VB006-050	Screw
PA010-607-FONO1	Sound-absorbing	PA010-627-7016	Panel	VB008-028	Screw
PA010-607-FONO2	Sound-absorbing	PA010-627-FONO1	Sound-absorbing	VR004-001	Washer
PA010-607-FONO3	Sound-absorbing	PA010-627-GUAR	Rubber gasket	VR006-002	Washer
PA010-608-7016	Panel	PA010-628-7016	Panel		
PA010-608-FONO1	Sound-absorbing	PA010-628-FONO1	Sound-absorbing		

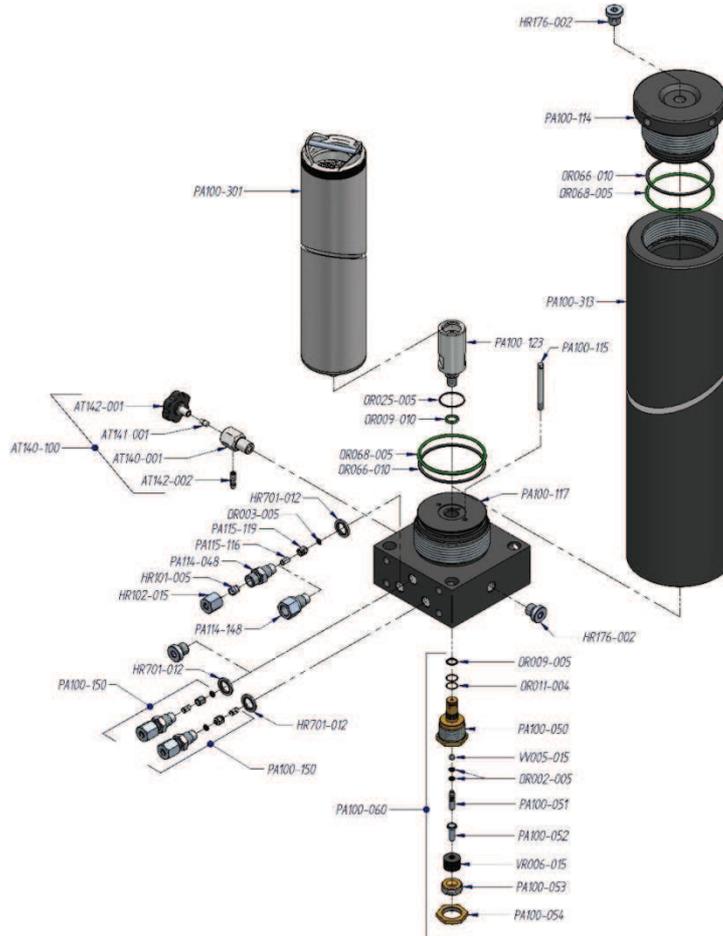


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
AT140-001	Drain valve housing	OR066-010	O-ring	PA110-102	Safety valve PN 200 bar
AT140-100	Condensate drain valve complete	OR068-005	O-ring	PA110-103	Safety valve PN 300 bar
AT141-001	Rilsan nut	PA100-050	Maintaining valve insert	PA114-048	Connection
AT142-001	Black screw of discharge	PA100-051	Piston maintaining valve	PA114-148	Connection
AT142-002	Drain out	PA100-052	Spring guide	PA115-116	Spring no return valve
HR101-005	Ogive	PA100-053	Closure plug	PA115-119	Piston no return valve
HR102-015	Nut fitting pipe	PA100-054	Nut	VR006-015	Washer spring
HR176-002	Closure plug	PA100-060	Maintaining valve complete	VV005-015	Sphere
HR701-012	Washer	PA100-301	Filter cartridge - electric		
OR002-005	O-ring	PA100-313	Filter housing		
OR003-005	O-ring	PA100-114	Head filter housing		
OR009-005	O-ring	PA100-115	Nozzle		
OR009-010	O-ring	PA100-117	Base filter		
OR011-004	O-ring	PA100-123	Extension filter		
OR025-005	O-ring	PA100-150	Pipe fitting whit not return valve		

**SPARE PARTS  
PACIFIC MX**  
*Fitting and connection*

PA802-120 Rev.00

2016 Rev. 00

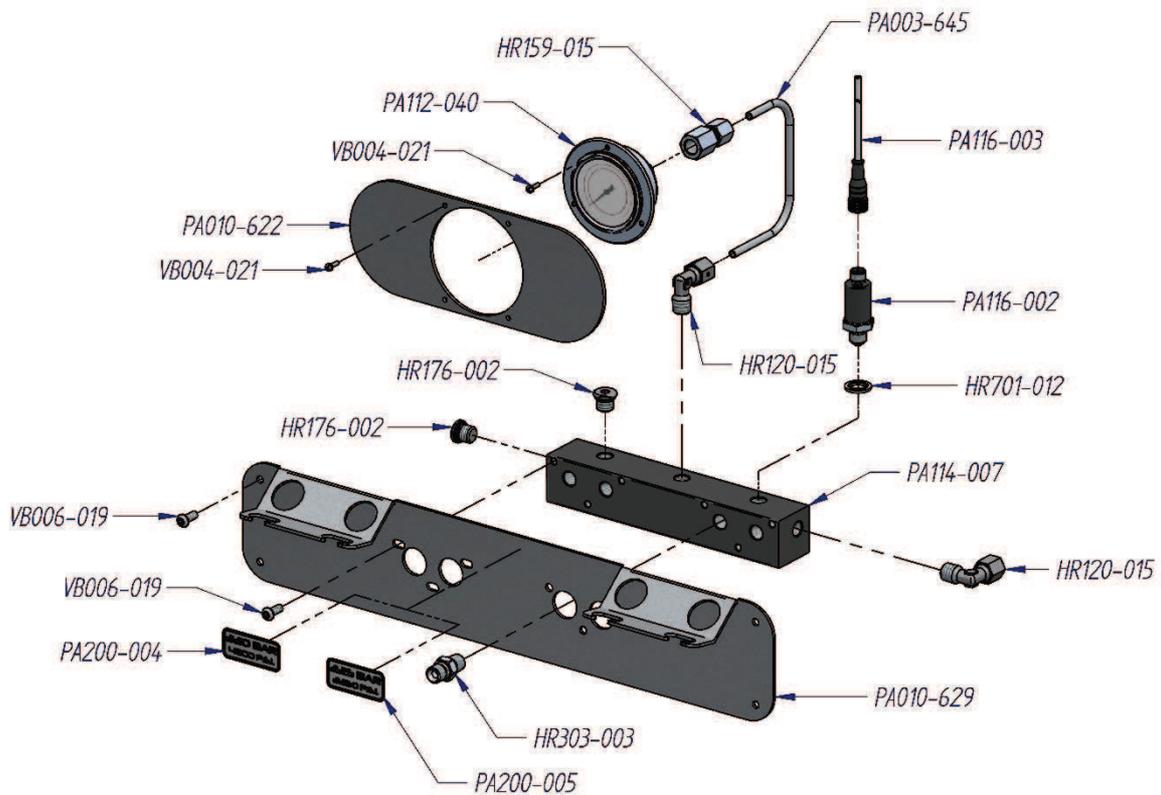


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
HR120-015	Pipe fitting "L"	PA010-622	Flange	PA200-004	Sticker
HR159-015	Pipe fitting	PA010-629	Panel	PA200-005	Sticker
HR176-002	Closure plug	PA112-040	Manometer	VB004-021	Screw
HR303-003	Fitting hose	PA114-007	Distridutor 4 exit	VB006-019	Screw
HR701-012	Washer	PA116-002	Trasduttore		
PA003-645	Tube	PA116-003	Cable for trasduttore		

**SPARE PARTS  
PACIFIC MX**  
*Fitting and connection*


PA802-122 Rev.00

2016 Rev. 00

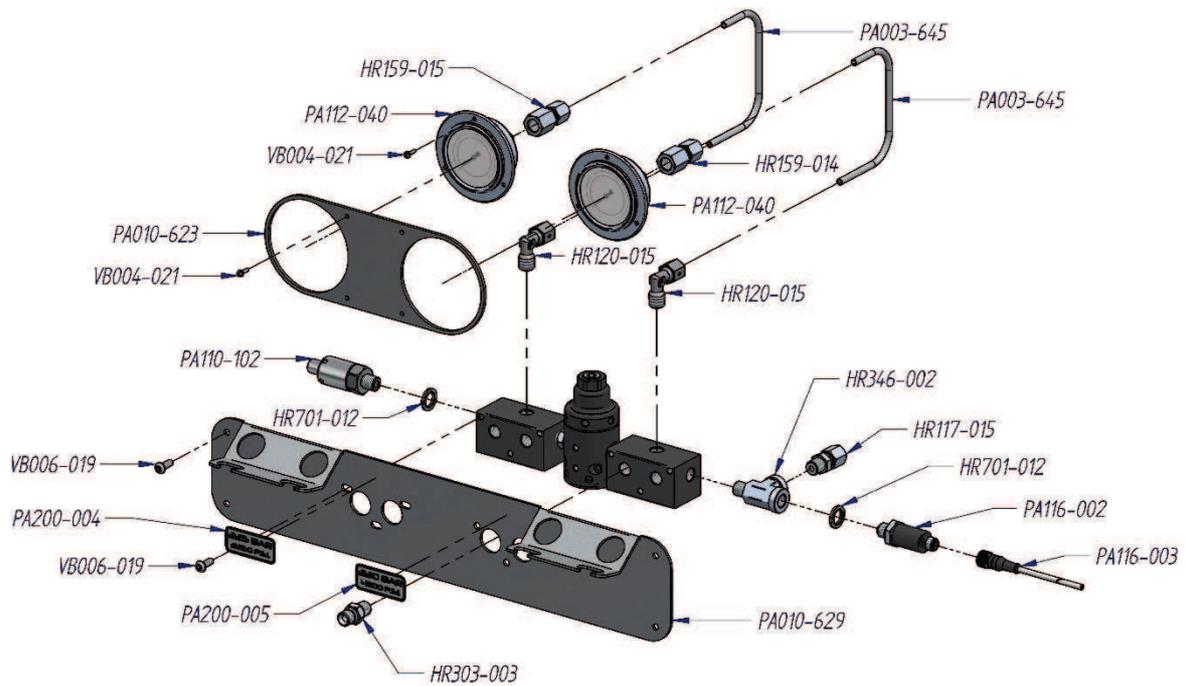


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
HR159-015	Pipe fitting	PA003-645	Tube	PA200-004	Sticker
HR120-015	Pipe fitting "L"	PA010-623	Flange	PA200-005	Sticker
HR159-015	Pipe fitting	PA010-629	Panel	VB004-021	Screw
HR176-002	Closure plug	PA110-102	Safety valve PN 200 bar	VB006-019	Screw
HR303-003	Fitting hose	PA112-040	Manometer		
HR346-002	Pipe fitting "T"	PA116-002	Trasductor		
HR701-012	Washer	PA116-003	Cable for trasductor		


	<b>SPARE PARTS PACIFIC MX</b> <i>Fitting valve – dual pressure</i>	PA802-121 Rev.00
		2016 Rev. 00

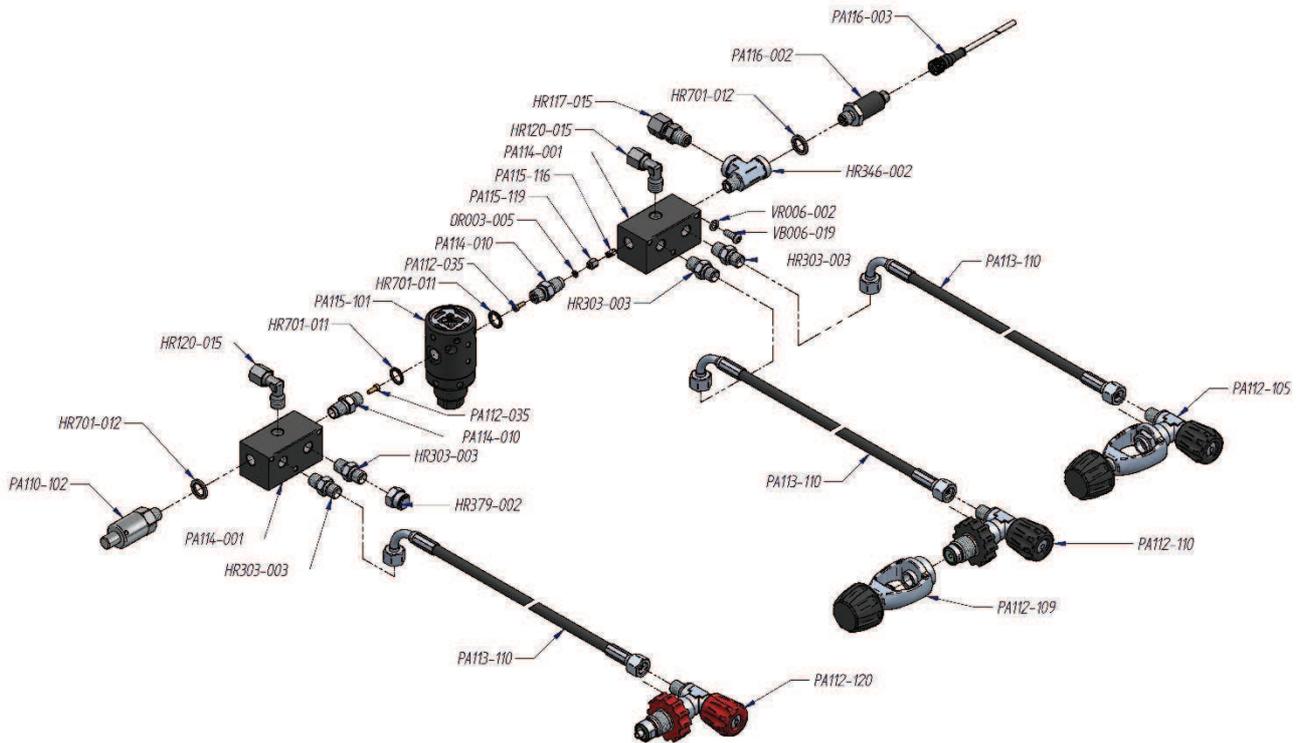


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
HR117-015	Pipe fitting	PA112-035	Filter	PA115-116	Spring no return valve
HR120-015	Pipe fitting "L"	PA112-105	Fitting valve INT 200	PA115-119	Piston no return valve
HR303-003	Connection	PA112-109	Adapter DIN 200 / INT-CGA 200 Bar - YOKE	PA116-002	Trasductor
HR346-002	Pipe fitting "T"	PA112-110	Fitting valve DIN 200	PA116-003	Cable for trasductor
HR379-002	Closing plug	PA112-120	Fitting valve DIN 300	VB006-016	Screw
HR701-011	Washer	PA113-110	Fitting hose	VR006-002	Washer
HR701-012	Washer	PA114-001	Distributor 2 exit		
OR003-005	O-ring	PA114-010	Connection		
PA110-102	Safety valve PN 200 bar	PA115-101	Reducer high pressure		

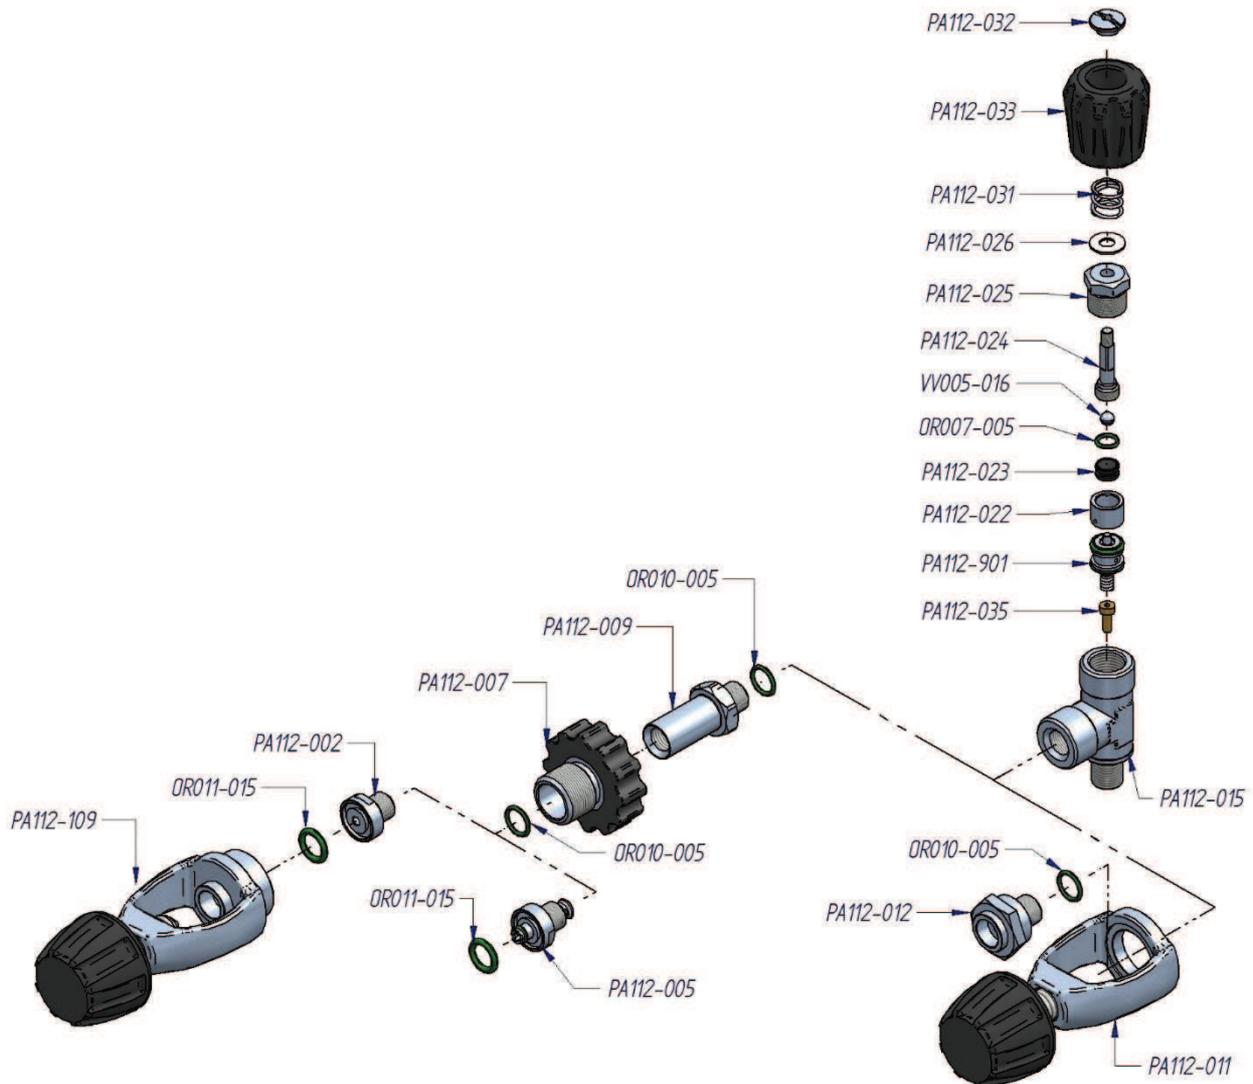


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
OR007-005	O-ring	PA112-012	Bracket blocks INT-CGA	PA112-032	Nut
OR010-005	O-ring	PA112-015	Body valve	PA112-033	Rubber knob black 200 bar
OR011-015	O-ring	PA112-022	Cylindrical guide	PA112-035	Filter
PA112-002	Fitting connection 200 BAR	PA112-023	Piston valve insert	PA112-109	International connection INT-CGA
PA112-005	Fitting connection 200 BAR flow stop	PA112-024	Valve shaft	PA112-901	Kit pressure valve
PA112-007	Knob DIN 200 black	PA112-025	Closure nut	VV005-015	Sphere
PA112-009	Knob guide DIN 200	PA112-026	Washer		
PA112-011	International connection INT-CGA	PA112-031	Spring		

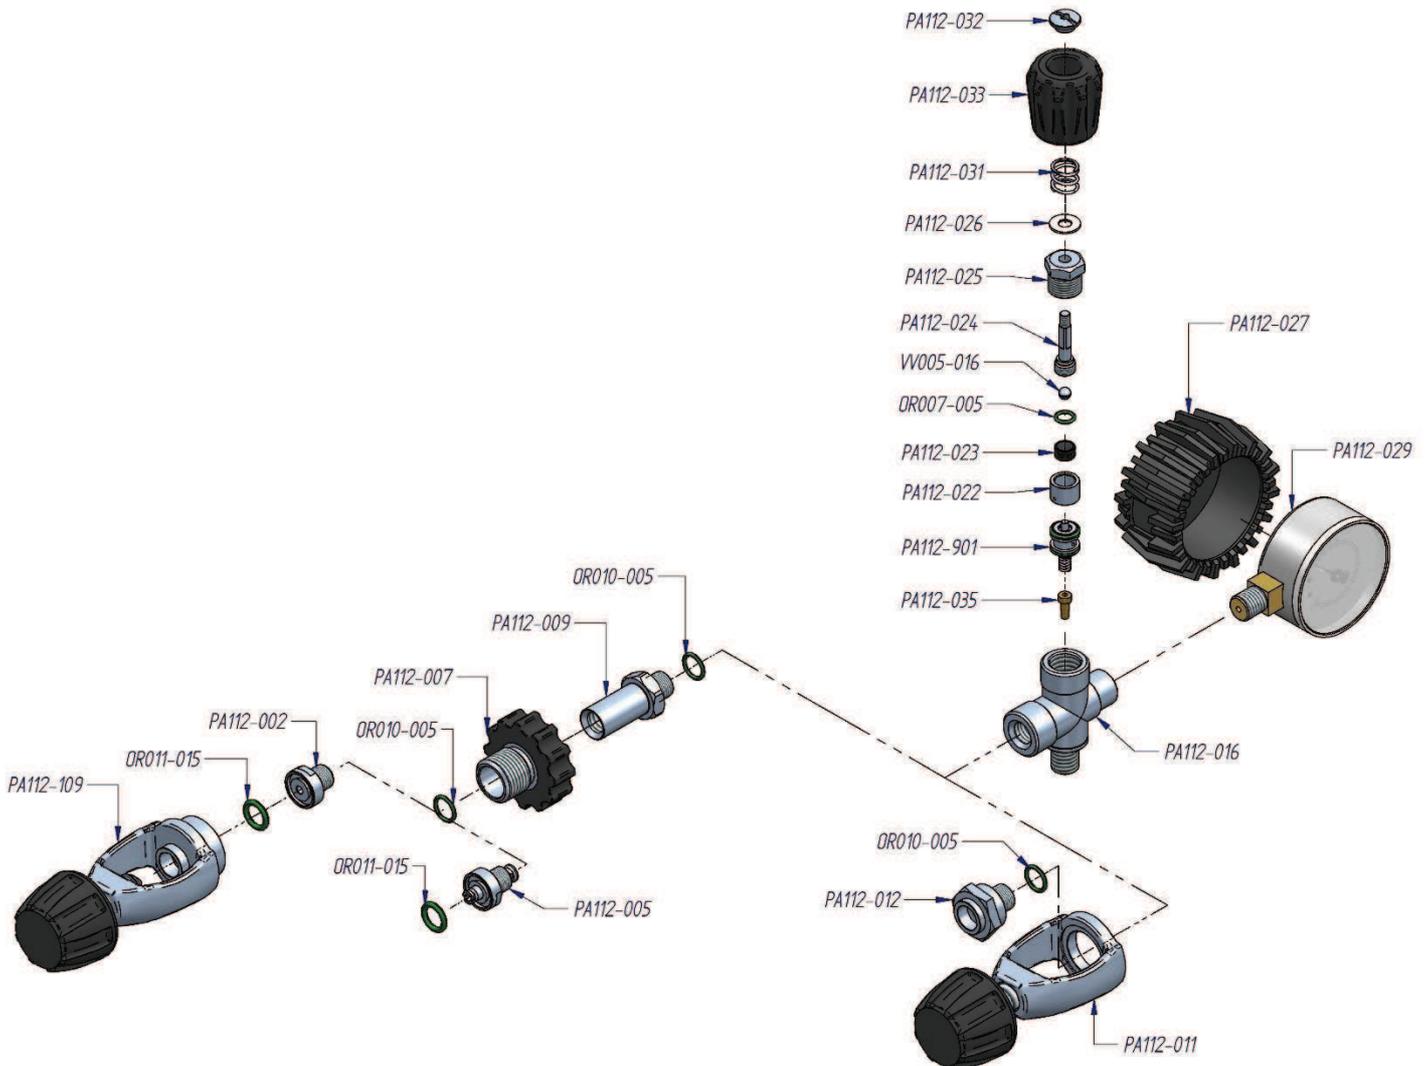


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
OR007-005	O-ring	PA112-016	Body valve	PA112-032	Nut
OR010-005	O-ring	PA112-022	Cylindrical guide	PA112-033	Rubber knob black 200 bar
OR011-015	O-ring	PA112-023	Piston valve insert	PA112-035	Filter
PA112-002	Fitting connection 200 BAR	PA112-024	Valve shaft	PA112-109	International connection INT-CGA
PA112-005	Fitting connection 200 BAR flow stop	PA112-025	Closure nut	PA112-901	Kit pressure valve
PA112-007	Knob DIN 200 black	PA112-026	Washer	VV005-015	Sphere
PA112-009	Knob guide DIN 200	PA112-027	Protection rubber black 200 BAR		
PA112-011	International connection INT-CGA	PA112-029	Pressure gauge 200 BAR		
PA112-012	Bracket blocks INT-CGA	PA112-031	Spring		

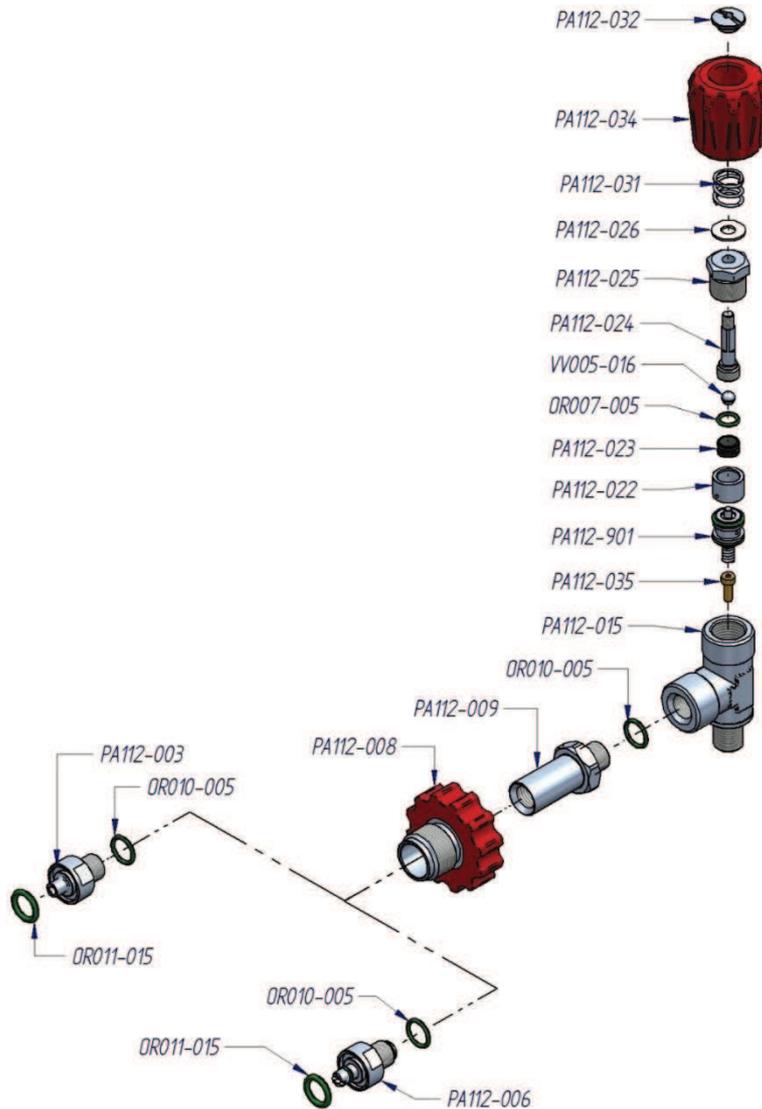


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
OR007-005	O-ring	PA112-015	Body valve	PA112-032	Nut
OR010-005	O-ring	PA112-022	Cylindrical guide	PA112-034	Rubber knob red 300 bar
OR011-015	O-ring	PA112-023	Piston valve insert	PA112-035	Filter
PA112-003	Fitting connection 300 BAR	PA112-024	Valve shaft	PA112-901	Kit pressure valve
PA112-006	Fitting connection 300 BAR flow stop	PA112-025	Closure nut	VV005-015	Sphere
PA112-008	Knob DIN 300 red	PA112-026	Washer		
PA112-009	Knob guide DIN	PA112-031	Spring		

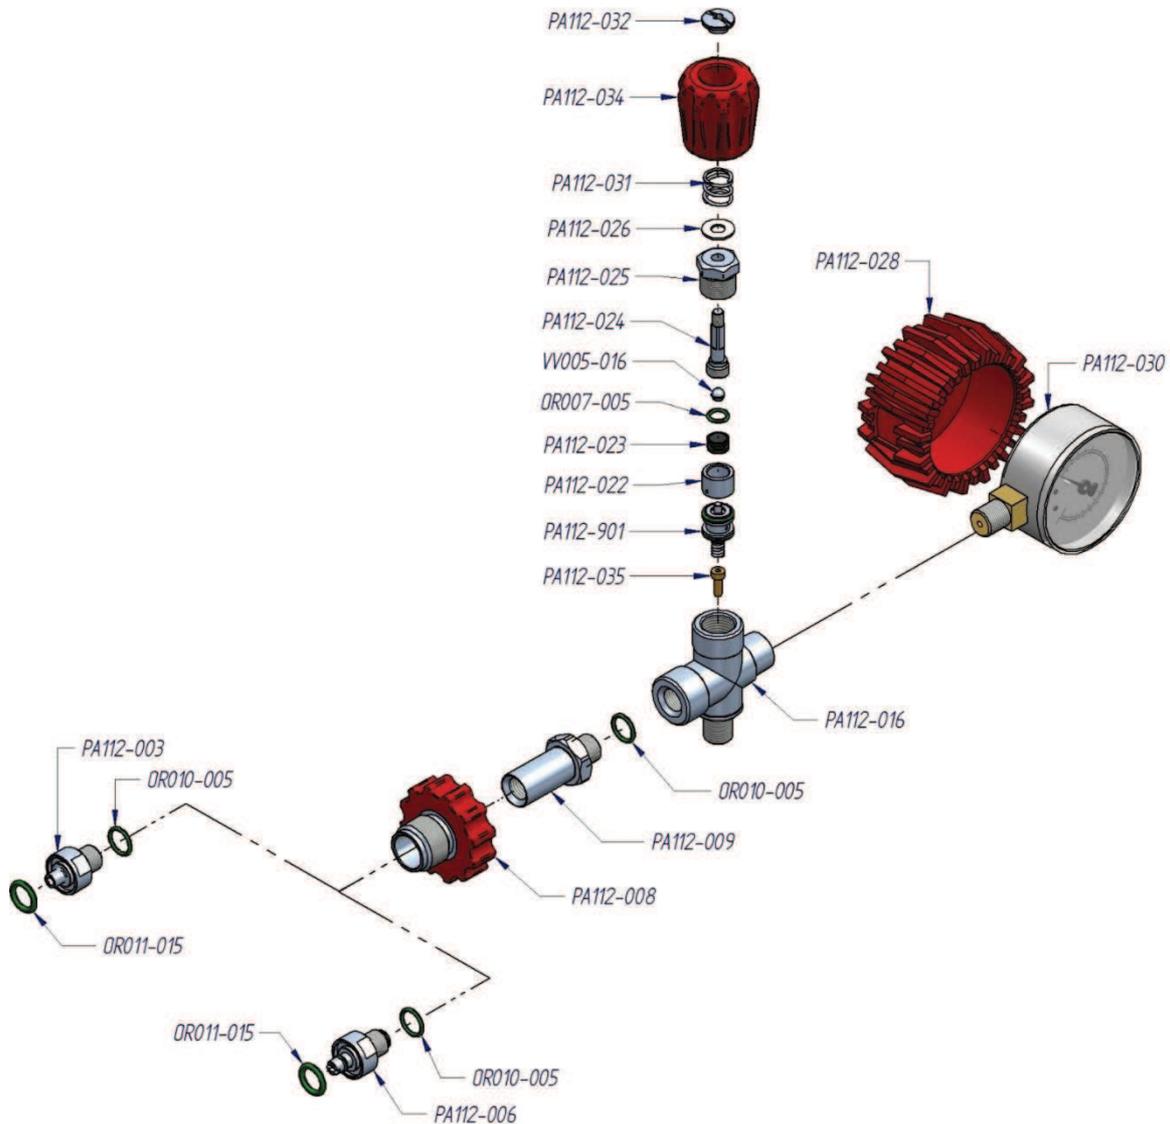


CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
OR007-005	O-ring	PA112-016	Body valve	PA112-030	Pressure gauge 300 BAR
OR010-005	O-ring	PA112-022	Cylindrical guide	PA112-031	Spring
OR011-015	O-ring	PA112-023	Piston valve insert	PA112-032	Nut
PA112-003	Fitting connection 300 BAR	PA112-024	Valve shaft	PA112-034	Rubber knob red 300 bar
PA112-006	Fitting connection 300 BAR flow stop	PA112-025	Closure nut	PA112-035	Filter
PA112-008	Knob DIN 300 red	PA112-026	Washer	PA112-901	Kit pressure valve
PA112-009	Knob guide DIN	PA112-028	Protection rubber red 300 BAR	VV005-015	Sphere

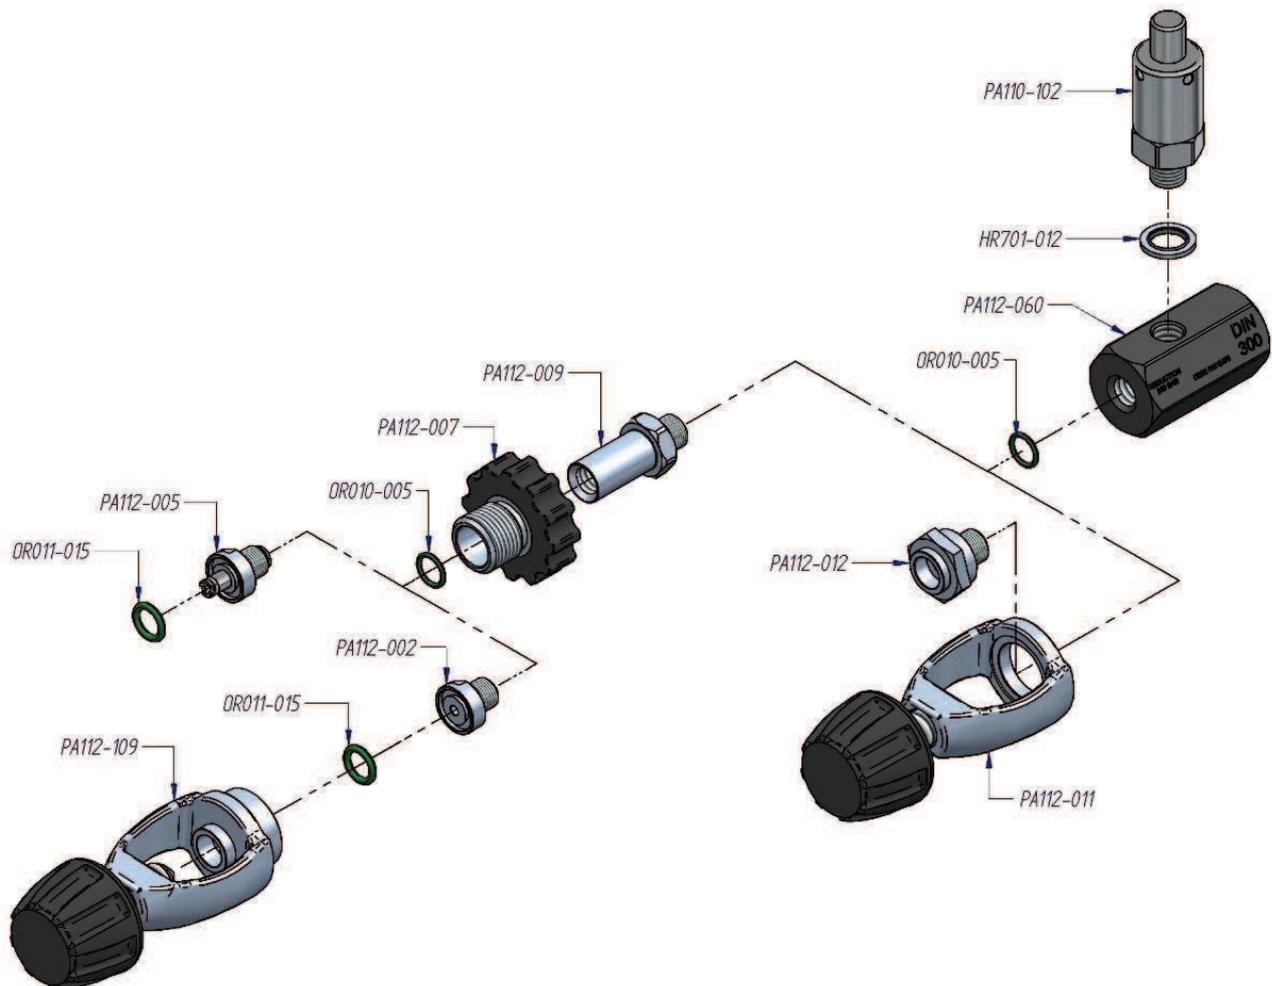

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
HR701-012	Washer	PA112-005	Fitting connection 200 BAR flow stop	PA112-060	Reduction Body
OR010-005	O-ring	PA112-007	Knob DIN 200 black	PA112-109	International connection INT-CGA
OR011-015	O-ring	PA112-009	Knob guide DIN 200		
PA110-102	Safety valve PN 200 Bar	PA112-011	International connection INT-CGA		
PA112-002	Fitting connection 200 BAR	PA112-012	Bracket blocks INT-CGA		

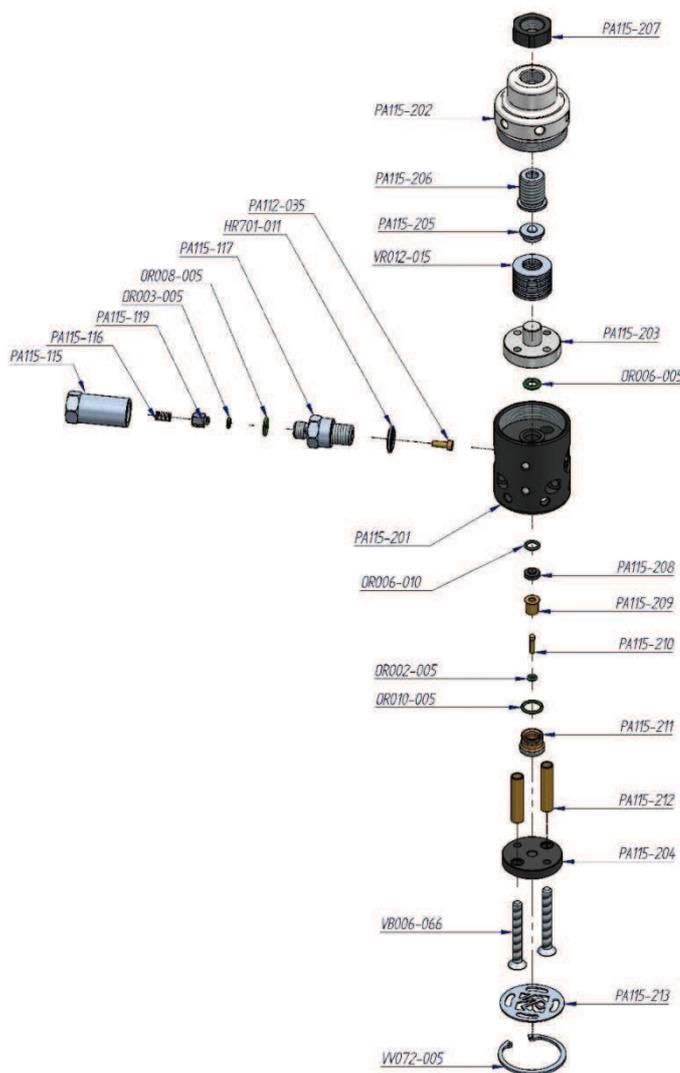

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
HR701-011	Washer	PA115-119	Piston no return valve	PA115-211	Flange
OR002-005	O-ring	PA115-201	Body	PA115-212	Cylinder
OR003-005	O-ring	PA115-202	Flange	PA115-213	Flange
OR006-005	O-ring	PA115-203	Flange	VB006-066	Screw
OR006-010	O-ring	PA115-204	Flange	VR012-015	Washer
OR008-005	O-ring	PA115-205	Spring support	VV072-005	Safety ring
OR010-005	O-ring	PA115-206	Screw		
PA112-035	Filter	PA115-207	Nut		
PA115-115	Body no return Valve	PA115-208	Washer		
PA115-116	Spring no return valve	PA115-209	Cylinder		
PA115-117	Body no return valve	PA115-210	Piston		

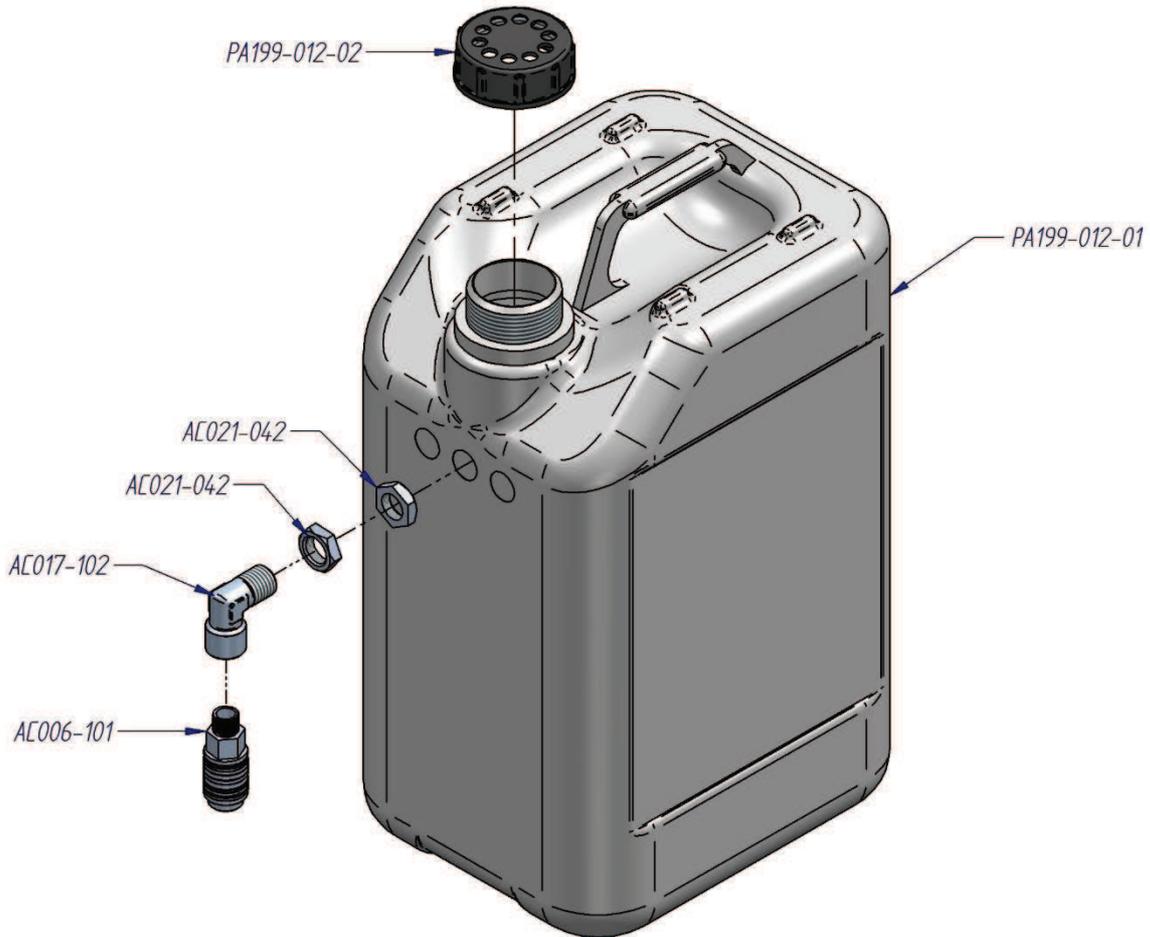

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
AC006-101	Universal Coupler	AC021-042	Nut	PA199-012-02	Cover
AC017-102	Pipe fitting "L"	PA199-012-01	Tank		